

 


# ACOAS



SP ACOAS-AC/EC Auto-Changeover/Duty Share/Speed Control for dedicated control of the SP AC CAB TWIN ranges, plus various other SP AC and EC Twin fan bespoke systems. Manual Fan Selector Button. Front Panel illumination showing running and/or fault condition. Variable overload current adjustable from 1 to 8 Amps, in variable steps.


L011100000577 - ACOAS-AC/EC AUTO CHANGEOVER CONTROLLER - S&P ACOAS-AC/EC Auto-Changeover/Duty Share/Speed Control for dedicated control of the S&P AC CAB TWIN ranges, plus various other S&P AC and EC Twin fan bespoke systems. Manual Fan Selector Button. Front Panel illumination showing running and/or fault condition. Variable overload current adjustable from 1 to 8 Amps, in variable steps.

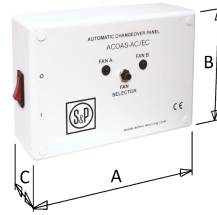


A	B	C
178	121	56



 Performance Chart




Drawing

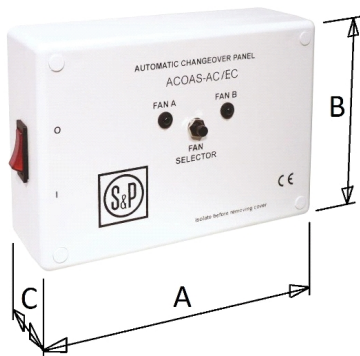

A	B	C
178	121	56




## Performance Chart

 



Drawing

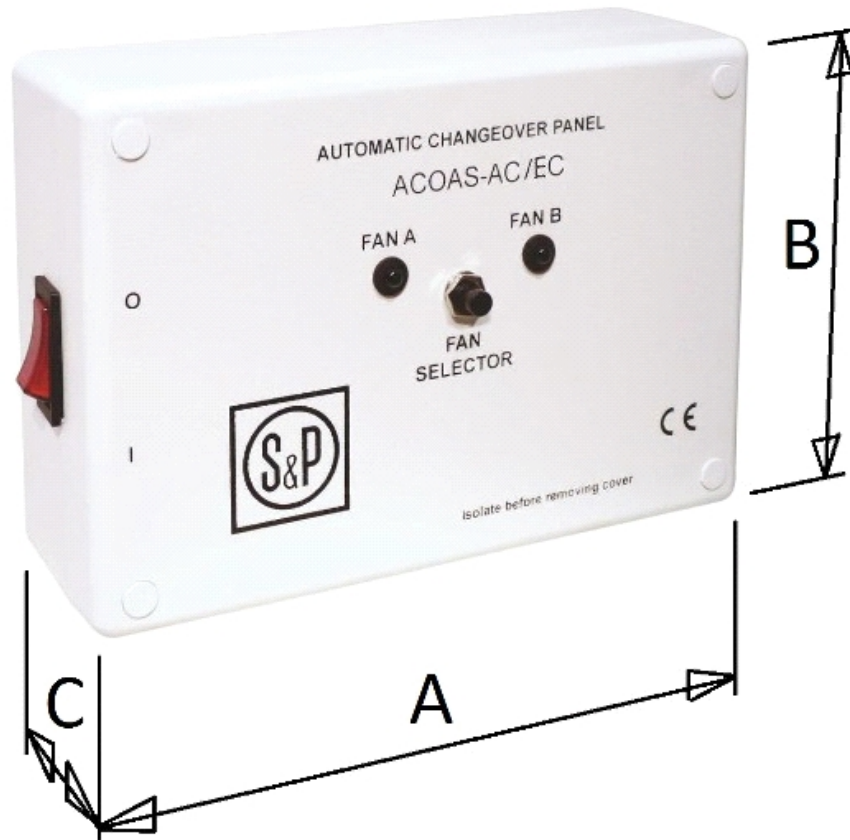

A	B	C
178	121	56