


## ZNE / ZNI

DIP-Schalter	S1	EV	NA
0	--	0-21	0-21
1	45	0-21	0-21

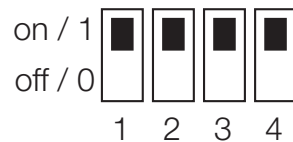

S1 - S4



DIP - Schalter				
S2	S3	S4	IT	EI
0	0	0	0	0
1	0	0	4	5
0	1	0	4	10
1	1	0	8	10
0	0	1	12	20
1	0	1	12	40
0	1	1	24	40
1	1	1	24	80

EV - Sekunden  
 Einschaltverzögerung  
 Delayed start  
 Démarrage  
 temporisé

NA - Minuten  
 Nachlauf  
 Run on time  
 Temporisation

IT - Stunden  
 Intervallzeiten  
 Interval time  
 Durée intervalle

EI - Minuten  
 Einschaltzeit  
 Running time  
 Durée de  
 fonctionnement